




Elasto-Deck BT H2O (Waterproofing - Plywood)

Over occupied areas - 90 Mils DFT

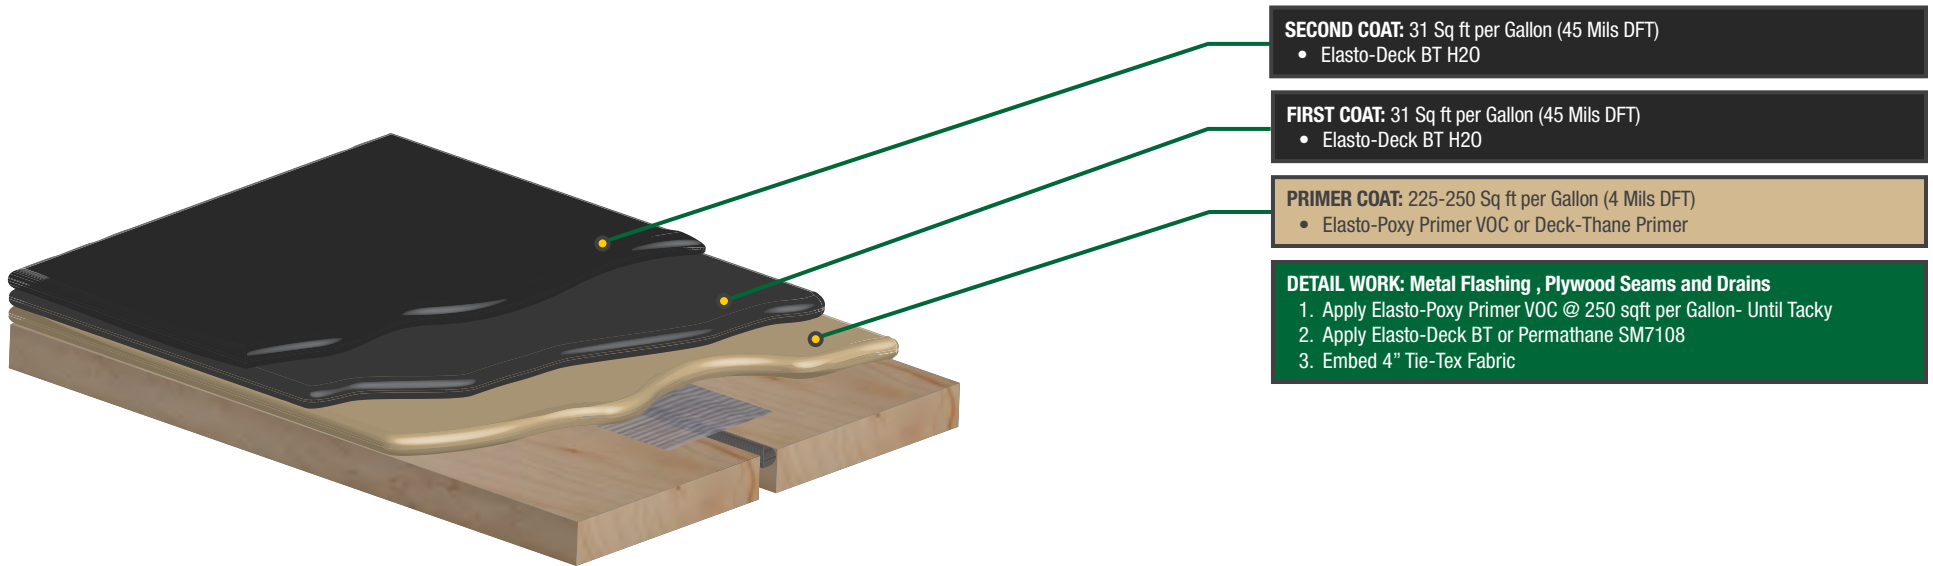


SECOND COAT: 31 Sq ft per Gallon (45 Mils DFT)
 • Elasto-Deck BT H2O

FIRST COAT: 31 Sq ft per Gallon (45 Mils DFT)
 • Elasto-Deck BT H2O

PRIMER COAT: 225-250 Sq ft per Gallon (4 Mils DFT)
 • Elasto-Poxy Primer VOC or Deck-Thane Primer

DETAIL WORK: Metal Flashing , Plywood Seams and Drains
 1. Apply Elasto-Poxy Primer VOC @ 250 sqft per Gallon- Until Tacky
 2. Apply Elasto-Deck BT or Permathane SM7108
 3. Embed 4" Tie-TEX Fabric

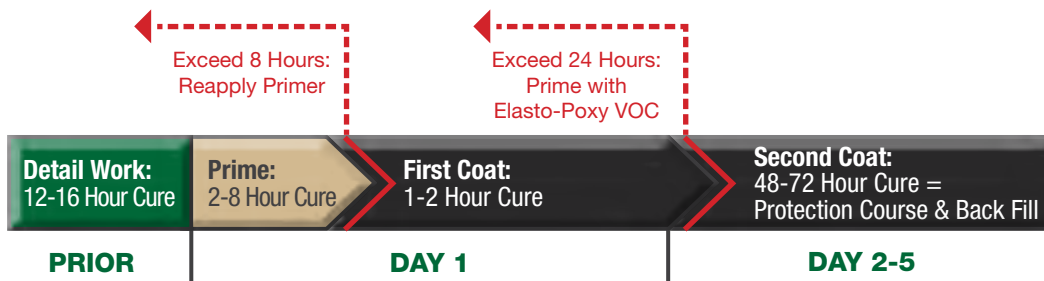



Elasto-Deck BT H2O (Waterproofing - Plywood)

Suggested Tools & Sundries



- Acetone/Xylene
- Blue Tape/Masking Tape
- Plastic Sheeting Roll
- Caulking gun
- Pool Trowel
- 1/8" Notched Trowel
- 1/8" Notched Squeegee w/ Handle
- Rubber Gloves
- Electric Drill
- Jiffy Mixing Paddle
- Screw Driver/Lid Opener
- Rags
- Chip Brush
- Push Broom
- Roller Handle with pole
- Roller Covers 3/4"-1"
- Empty Pail (Broadcast aggregate)
- Trash Bags
- Scissors